

Cleverscope Ltd Phone +64 9 213 0745 Mob +64 21 1777 367 Email support@cleverscope.com 101B Mt Eden Rd, Mt Eden P.O. Box 26-527 Auckland 1024 New Zealand

10 Jan 2018 v1.0

Connecting up 2 x CS448 as 8 channel oscilloscope

Summary

This instruction shows how to connect up two CS448 oscilloscopes to make them into one 8 channel oscilloscope.

Link Cable

Plug the link cable (which is a 500mm HDMI - HDMI cable) with one end into a Link Out port on one unit, and the other end into a Link In port on the other unit.



Connect power, USB and probes

Connect the power supply (12 - 19V) to the Power In sockets, the USB 3 cables, and any probes you want to use.

Waiting for Startup

After plugging in the power, the green Power Leds will flash. During this period, the unit is performing self test, and programming the isolated channels and isolated signal generator. When the green led changes to continuously on, the unit is ready to use. A unit that is flashing will not capture signals.

First Time Use as an 8 channel scope

Open the Cleverscope4 application, and navigate to the Settings/Choose Acquirer and set connection dialog:

<mark>/\∜</mark> Cscope	e Control		- 🗆 ×					
File Edit	Settings View	Window	Help					
Replace	Analog Colo Analog Nam Digital Name	urs es and Unit es and Color	s Ctrl+U urs					
Current F	Acquisition s	settings	Ctrl+D					
=) 07 <not a<="" th=""><th>Channel Tim</th><th>t 🕨</th></not>	Channel Tim	t 🕨						
0	Choose Acq	uirer and se	et connection					
ACQ	Close Acqui	rer connect	ion(s)					
Sing	Acquirer sca	aling						
S-A Au	Spectrum Pa	arameters	. Ctrl+H					
inggi	Averaging.	Ctrl+A						
Auto	Reset Avera	Ctrl+R						
Stre	Reset Average Cultre							
TRI	Display in di	3						
Slope	Display spec	trum log fr	equency					
Source Level	Calibrate Cl	everscope						
Pre trigge Filter	Graph Chan Display tool	nel Labels tips	•					
		Digita	Pattern					
Duration	10m	Source	2-CR10057					
Resolution	10n	Digital Patte	ern Required					
N Display	0	<u>, , , , , , , , , , , , , , , , , , , </u>						
F Sample	400M	8765	77777 54321					
Lock Re	sult 🗌 🔒	x x x	хххх∩					
Get Fram	Full	Do Aver						
Auto	get 🔄	De						
		Prot	tocol OFF					

On the dialog, set the Interface Source to USB or Ethernet - Specific Serial number.

<mark>/∛</mark> Choos	se acquirer and set	connection							×			
Acquirer a Type of A Interface	and interface select Acquirer Cleverscope Source USB or Ether	r tion:	umber 💌	Ethernet ir	nterface to use 10.1.20 Subnet Mask	0.145 💌	✓ ALL NICs □ Look for Cleverscop	es not configured	for this network			
Cleverso	ope aquirer select	ed:							0			
Serial	Serial number Cleverscope hardware configuration											
IP	address				Set static address	Set auto address	(DHCP)					
Subn	net mask	TCP Port	(Defa	ault: 53270)) Set TCP port							
								Recover	CAU			
Cleverso	ope devices found	on LAN or USB. clic	k on unit to se	elect:	No	ote: Cleverscope d	liscovery requires UDP p	orts 53271 & 53272	to be open.			
	U C				E1	isure firewals do r	tot block these UDP port	s, see neip for furtr	her details.			
Use	ੇ Serial # Interfa	ce Ethernet Addre	ss Subnet	TCP Port	t Addressing	Status	Time on	Type FW ve	erHW ver			
; č	Serial # Interfa	ce Ethernet Addre	ss Subnet	TCP Port	t Addressing	Status Available	Time on	Type FW ve	erHW ver			
	Serial # Interfa 1 CR10033 USB 2 CR10057 USB	ce Ethernet Addres	ss Subnet	TCP Port	t Addressing	Status Available Available	Time on	Type FW ve C5448 7319 C5448 7319	erHW ver			
	Serial # Interfa CR10033 USB CR10057 USB CR10053 USB	ce Ethernet Addre	ss Subnet	TCP Port	t Addressing	Status Available Available	Time on 8s 8s	Type FW va C5448 7319 C5448 7319 C5448 7319	erHW ver			
	 Serial # Interfa CR10033 USB CR10057 USB CR10053 USB DN6302 	ce Ethernet Addres	ss Subnet	TCP Port	t Addressing	Status Available Available	Time on 85 85	Type FW vol CS448 7319 CS448 7319 CS448 7319 CS448 7319 CS448 7319	erHW ver			
	 Serial # Interfa CR10033 USB CR10057 USB CR10053 USB DN6302 CR10029 	ce Ethernet Addres	ss Subnet	TCP Port	t Addressing	Status Available Available	Time on 85 85	Type FW value CS448 7319	erHW ver			
	 Serial # Interfa CR10033 USB CR10057 USB CR10053 USB DN6302 CR10029 CR10044 	ce Ethernet Addres	ss Subnet	TCP Port	t Addressing	Status Available Available	Time on 8s 8s	Type FW vol CS448 7319 CS448 7319	er details.			
	Serial # Interfa CR10033 USB CR10053 USB CR10053 USB DN6302 CR10029 CR10029 CR1004 d'Ctrl' to select multip	ce Ethernet Addres	ss Subnet	TCP Port	t Addressing	Status Available Available Image: status	Time on 8s 8s	Type FW vol C5448 7319 C5448 7319	er HW ver			
	Serial # Interfa CR10033 USB CR10057 USB CR10053 USB DN6302 CR10029 CR10044 d'Ctrl' to select multip	ce Ethernet Addres	ss Subnet	TCP Port	t Addressing	Status Available Available Available Image: status Image: status	Time on 8s 8s	Type FW vol CS448 7319	er HW ver			

Wait until the two units become available. This may take up to 10 seconds. Next click the unit you want to be Channels A-D, this is first in the list (CR10033 in the example).

Hold the CTRL key down and click the second unit. It will be channels E-H.

Click OK. This will start the connection.

Start Capturing



Click on Auto to start capturing. You should see signals (or flat lines if there are no signals). You are now ready to start.

Connecting again in the Future

Close the application when you no longer want to use the oscilloscope. Disconnect power to the two scopes.

To start again, power the oscilloscopes, and wait until the green led is no longer flashing. Start the Cleverscope4 application. It will remember your last setup. Click Auto to start capturing.

If you have questions email support@cleverscope.com